


Detailed instructions can be found on the enclosed CD

Input for external reference clock (10MHz) can be switched via software for use of an external 10MHz clock (optional, 3.3V TTL). By default the internal TCXO reference clock is used.



USB-Connector (control and programming, no charge function)

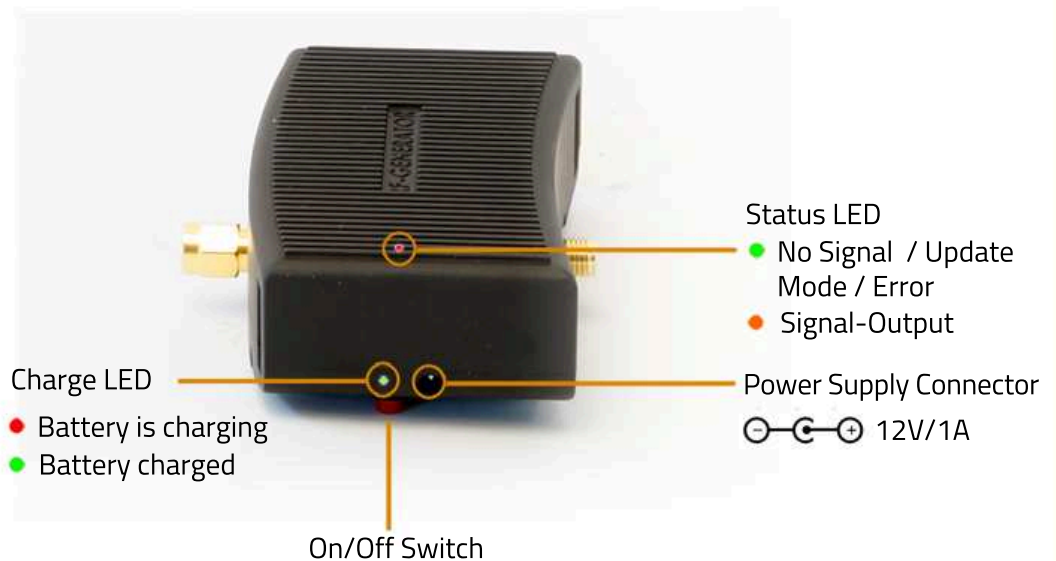

Connect the generator with the enclosed USB cable to the PC. Install and run the generator software from the enclosed CD. Once the generator is switched on, the software automatically detects the unit and opens a Control Panel to remote-control the generator. Several generators can be operated simultaneously on one PC - the software recognizes the devices automatically and opens for each generator its own control window. Before first use, the battery should be fully charged (approx. 90 minutes), the charge LED lights up green when the battery is fully charged.

CAUTION: Perform firmware updates only with the AC adapter connected through!



Battery Disposal Information

Please ensure a proper, correct and legal way for the disposal of Electrical components and the batteries.